



How To Measure:

Inside Mount

1. Measure the width of the inside of the window frame at the top, middle, and bottom. Record the narrowest measurement.
2. Lotus Horizontal Blinds have 1/2" deduction for Inside Mount. Select a size width that matches your measurement in step 1. The blind can be up to to 3/4" smaller than measurement. For best fit, find the size with a width closest to your measurement.
3. Measure the height at the left and right of the inside of the window frame. Record the longest measurement. A blind longer than your required length will work as the blind can be stopped at any position.

Outside Mount

1. Measure the width of the outside of the window frame at the top, middle, and bottom. Record the widest measurement.
2. Lotus & Windoware Horizontal Blinds have 1/2" deduction for Inside Mount. For Outside Mount, add a minimum of 1/2" to the width measurement.
3. Measure the height at the left and right of the outside of the window frame to the top of the window frame. Record the longest measurement. A blind longer than your required length will work as the blind can be stopped at any position.